



VVV-S0249 1/10 JDM Hydraulic Functional Bottle Jack

Step 1.

Instructions for use:

1. From the jack's highest lift point (starting position out of the box), pull out the handle and use the head to rotate the pressure relief valve counterclockwise for 1 ½ turns
2. Slowly press the ram to the bottom and rotate the relief valve clockwise for 1 ½ turns
3. Insert the handle into the handle socket, and rotate the handle

Step 2.

When using the jack for the first time:

1. Press down the ram and pump the handle slowly
 - a. If the speed is too fast, the hydraulic oil and air in the cylinder will create bubbles
2. Once the hydraulic oil pressure is raised, a small amount of hydraulic oil will be discharged from the exhaust hole
 - a. This is a normal occurrence that will cease after multiple cycles of work

Step 3.

Additional Information:

1. Vertical jacks can only be used vertically, not horizontally or upside down
2. If you notice the Ram not going to full extension, use a syringe to add more hydraulic oil to the filler plug
3. When storing the jack, keep the jack at full extension and do not lie it on its side. This could cause excessive leaking out of the filler plug

