

# RC4WD Universal NiMH Peak Battery Charger Instructions



**CAUTION** Please read these instructions carefully prior to using!

## Battery Charging

1. Charge only batteries that are cool to the touch and are not damaged (swollen, bent, broken or punctured).
2. Connect the charger to the proper wall receptacle noting proper polarity.
3. Plug the battery's connector into the charger's connector. The LED will light red as it is charging.
4. The charger will emit a tone and the LED will change to green once fully charged. NOTE: Monitor the battery during the charge and end the charging process if the charger or battery becomes very hot.
5. Always unplug the battery from the charger immediately upon completion of charging.



**CAUTION:** Overcharging a battery can cause a fire.

## SPECIFICATIONS

Input Voltage	100VAC~240VAC
Output Current	650MA
Charging Model	pre-charged, steady current, monitoring, automatic protection
Charging Capability	5-8 NiMH batteries

## ⚠ WARNING

This charger is designed to charge only 5~8 Cell NiMH batteries. Make sure that the battery is compatible with the charger's charge rate.

Never let children operate unsupervised while charger is in use. Adult supervision is recommended at all times.

The charger is for indoor use only. Do not use in case of high humidity conditions or condensation.

Do not attempt to open or modify the charger's case.

Do not let objects or liquids penetrate the charger's cooling vents.

The charger can get hot during use. Use the charger in a well ventilated area, away from people and electrically conductive or inflammable materials.

If the battery has suspicious reactions during the charge or discharge, such as overheating, venting or leaking, immediately disconnect the battery and store it in a safe location, away from people and inflammable materials.

