


RC4WD CHEVROLET BLAZER AND K10 CHROME FRONT GRILL (80'S)

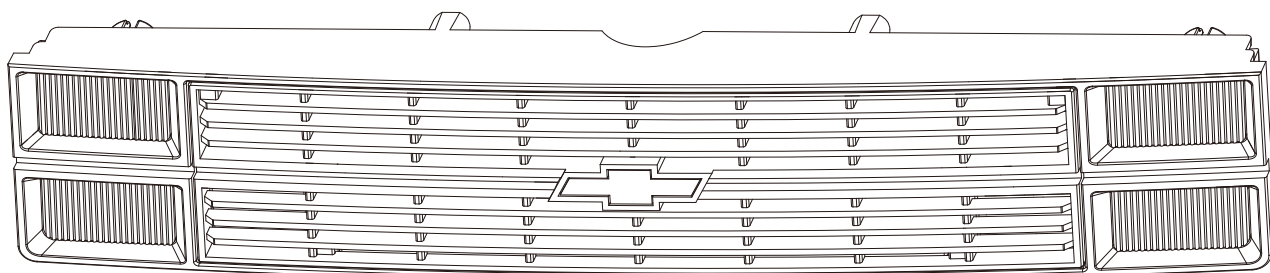


RC4WD Step 1

Cut off the excess part of the car body.

Cortar la parte sobrante de la carrocería del coche.

Coupez la partie excédentaire de la carrosserie de la voiture.

Schneiden Sie den überschüssigen Teil der Karosserie ab.

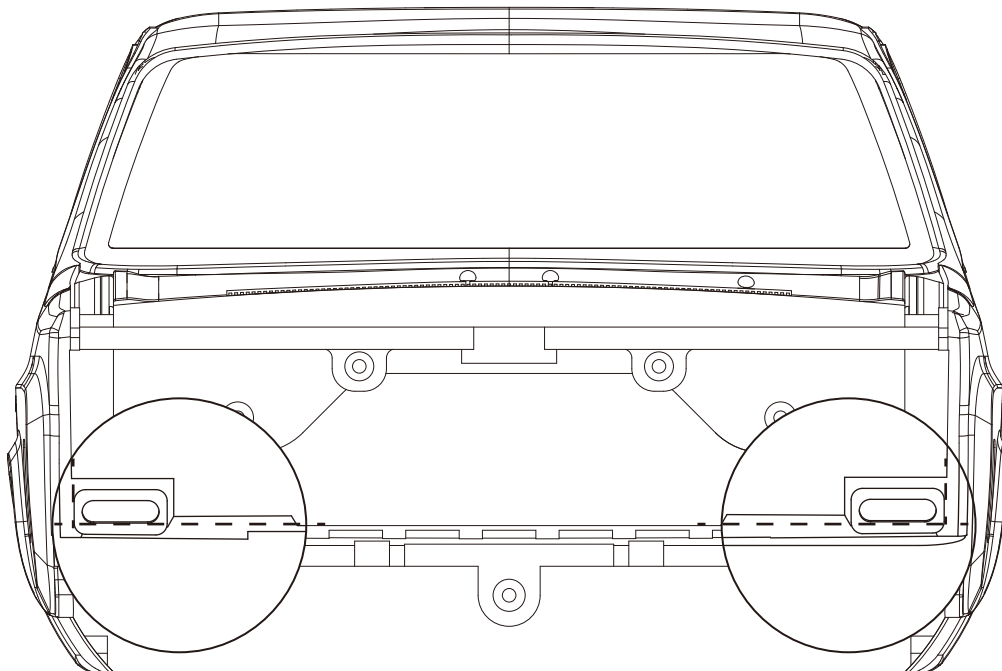


RC4WD Step 2

Cutting completed.

Corte completado.

Découpe terminée.

Schneiden abgeschlossen.

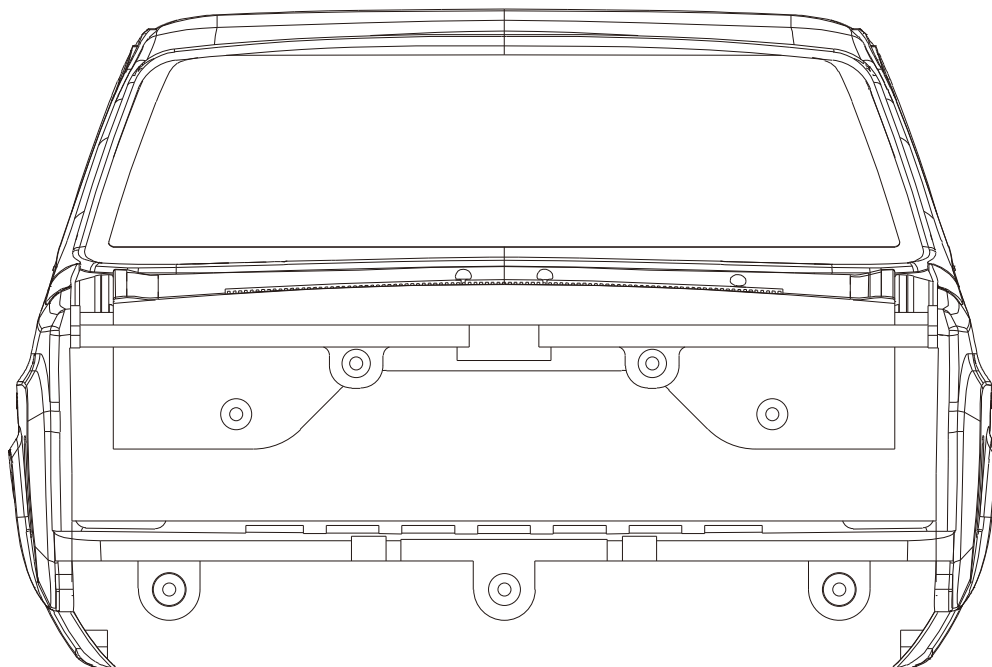


RC4WD Step 3

Install the front grille.

Instalar la rejilla delantera.

Installer la calandre avant.

Installieren Sie den Frontgrill.

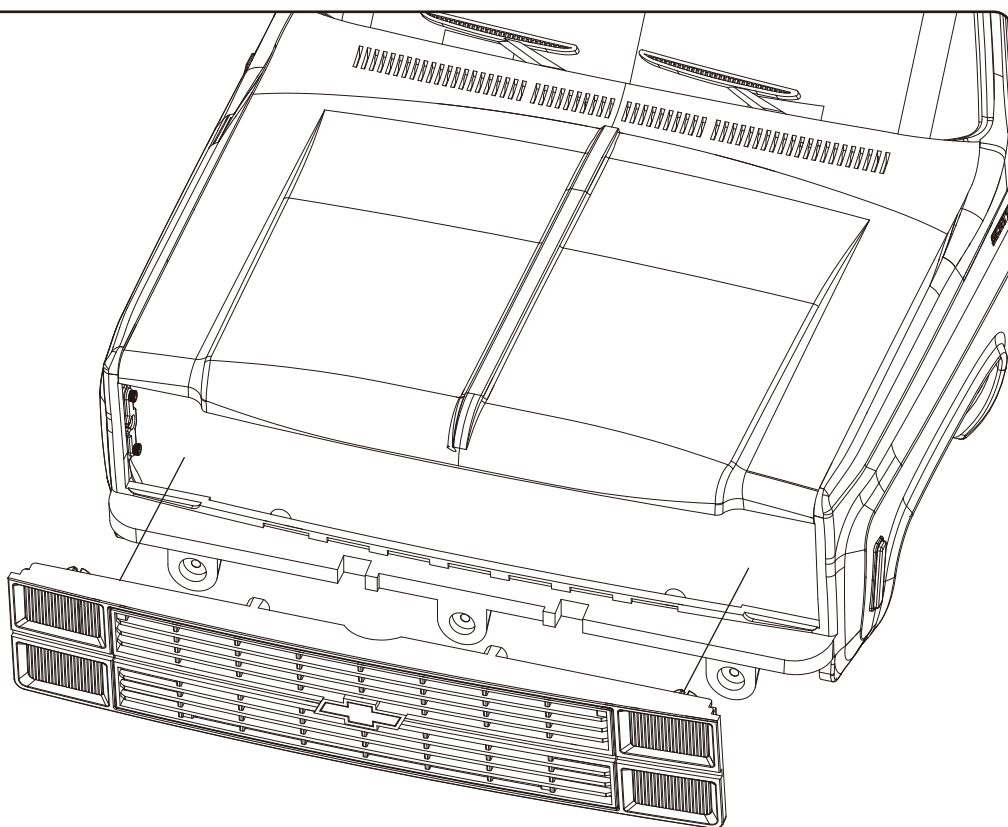

RC4WD Step 4

Install the front grille.

Instalar la rejilla delantera.

Installer la calandre avant.

Installieren Sie den Frontgrill.



X2

150-0208

M3 x 6mm BHSTS



X2

150-0195


M3 x 8mm BHSTS



X2

150-0238

M2 x 6mm SHSTS

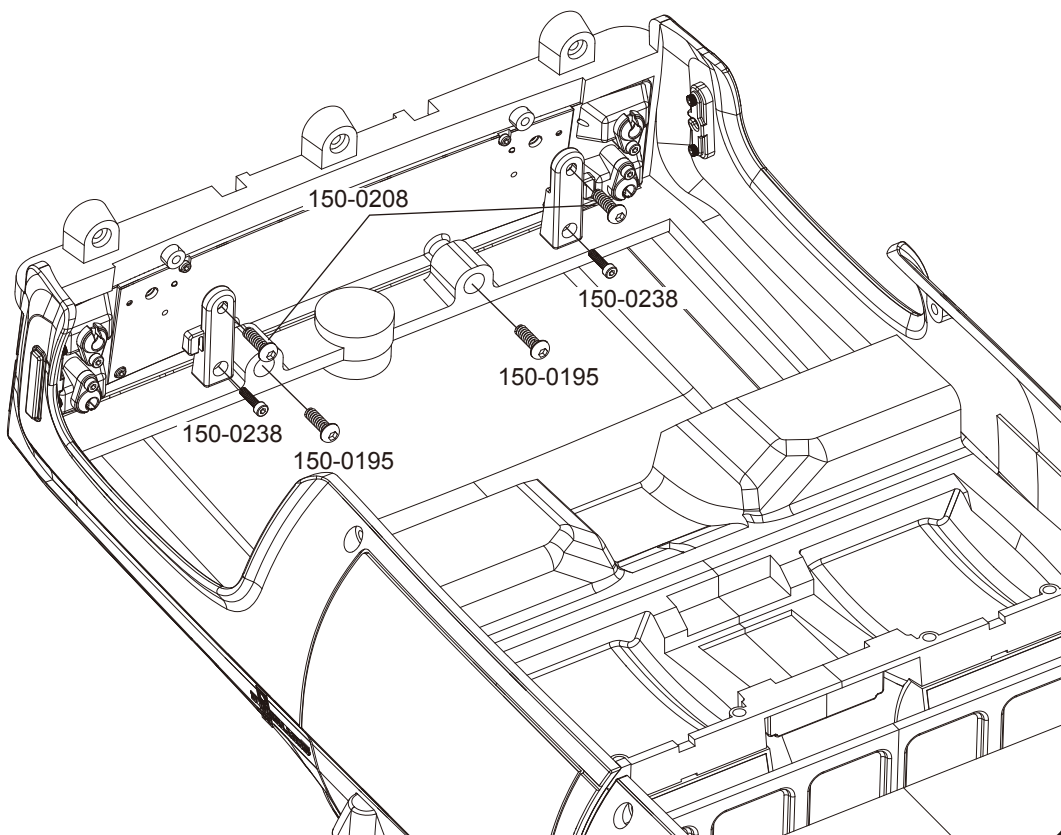



www.rc4wd.com



RC4WD

737 N. Gateway St.
Visalia, CA 93291

Web: www.rc4wd.com - Email: support@rc4wd.com

100-0151